

## DIKTAFON- NAVODILA

**Synchronizing the time between computer and the recording pen:**  
Sinhronizacija časa med računalnikom in pisalom za snemanje:

**1. Connect the recorder to USB interface, and make sure that the computer is connected to this USB alone.**

1. Povežite snemalnik v vmesnik USB in se prepričajte, da je računalnik priključen na USB

**2. Gunzip , Select and enter into “Settime” file.**




Settime .

**2.Izberite in odprite datoteko...**

**3. Double click** SetDigitRecorderTm  
SetUDiskTime Mic.. , and then click

**3.Dvojni klik** , in še en klik

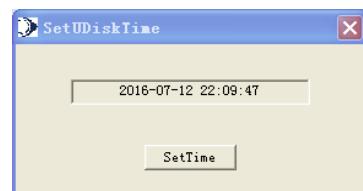

**to synchronize the time of recording pen with**

**that of the computer, the newly recorded files will display accurate time same with that displayed on the computer.**

da sinhronizirate čas snemanja s tistim v računalniku, bodo na novo posnete datoteke prikazale točen čas, ki je enak kot na računalniku.

**4. If errors occur, please remove the recording pen, and check other USB devices, and then plug in the recording pen, and wait for 5 seconds to repeat the above operation.**

4. Če pride do napak, odstranite usb in preverite druge naprave USB, nato pa priključite snemalnik in počakajte 5 sekund, da ponovite zgornjo operacijo.

**Note: time to change the time in the tool with the time and date of the computer synchronization, to change the time can only change the time on the computer time**

**OPOZORILO:** da spremenite čas v orodju s časom in datumom računalniške sinhronizacije, če želite spremeniti čas, lahko spremenite le čas v času računalnika

**Note: some computer antivirus software will indicate as virus, please note**

that  **Hardware.dll**  
5.34.5.0  
Hardware  **SetDigitRecorderTm** **SetUDiskTime Mic...** **are not virus, and**

**antivirus software give false alarm. Contact after-sales service personnel if you delete the files by mistakes.**

**If the security guard prompts to stop operation, please select “allow” option.**

**Opozorilo:** nekatera računalniška protivirusna programska oprema bo označila USB kot virus, upoštevajte, da niso virus, in protivirusna programska oprema daje lažni alarm. Obrnite se na servis, če datoteke izbrišete z napakami.

Če varnostni sistem pozove k prenehanju delovanja, izberite možnost »omogoči«.

**Remarks:**

**When the machine shuts down due to low power, the time will be reset, please connect it to the computer to reset the time.**

**It is recommended to copy the files on the desktop, so as to prevent those stored in recording file from deleting by mistake.**

Ko se USB izklopi zaradi nizke porabe, se čas ponastavi, povežite ga z računalnikom, da ponastavite čas.

Priporočljivo je, da kopirate datoteke na namizje, da preprečite, da bi se datoteke, shranjene v snemalni datoteki.